 



## Searching for Titles

- Display the Guide
- Display Title Search

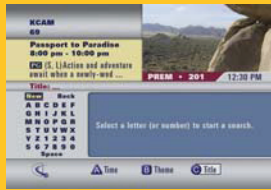


- Highlight a letter
- Enter a letter (A letter appears in the Title bar)

 Continue typing until your title appears in the Title List

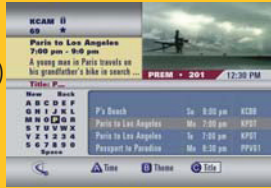


- Press until Title List is active
- Highlight a title
- Display the title option box

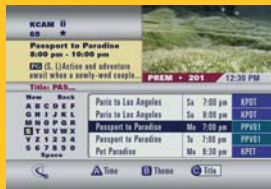


## Set a Timer

- Highlight a timer option
- Set timer recurrence
- Accept and continue

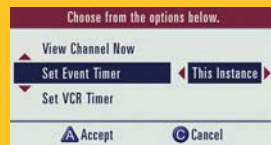

## Using the QuickMenu™

 - Display QuickMenu (If activated)
- Scroll through categories of shortcuts and premium services
- Highlight a shortcut on the list
- Select a shortcut on the list

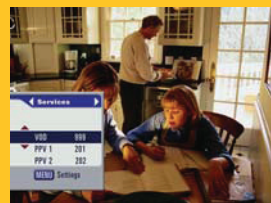

All screen designs © 2009 Rovi Corporation

## Your Remote Control



TruVista Customer Support  
800-768-1212

# TRUVISTA®

Connecting what matters

## Quick Tips Guide



# Digital Receiver



## Browsing for Shows

**INFO** Display the Channel Banner

◀▶ Browse by time  
(Hold to speed scroll)

◀▶ Browse by channel  
(Hold to speed scroll)

**INFO** Press twice to display QuickInfo™ for extended program information

⏪ PAGE Display more pages of information

SELECT OK View selected program



## Using the Guide

### Find Shows By Time

 
**GUIDE** Display the Guide

◀▶ Browse by time

◀▶ Browse by channels

0-9 Enter a channel number

⏪ PAGE Scroll channels a page at a time (Hold to speed scroll)

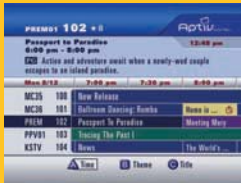

### Find Shows By Theme

**B** Display Theme

⏪ PAGE Scroll a page at a time

◀▶ Highlight a desired theme

▶ Display Programs list

▶ Highlight a program

SELECT OK View selected program



### Use Theme to buy PPV events

▶ Highlight the Pay Per View theme

▶ Display Programs list



▶ Highlight a future PPV program

SELECT OK Display a program description

**B** Display the Purchase options

▶ Highlight an option

▶ Accept and continue

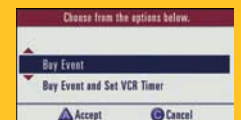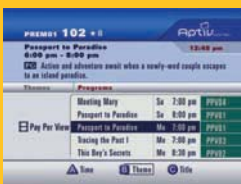

PIN entry is required when the Purchasing setting has been set to "Restricted"

## Using the Settings Menu

**MENU** Press twice: Display Settings Menu (Press only once if the QuickMenu is not activated)



### Setting Up Your Skipped Channel List

Channels that are marked as skipped will not display when using the channel up and down buttons

▶ Highlight Skipped Channels

▶ Display Channels list

▶ Highlight a channel

SELECT OK Add or remove from the Skipped Channels list

▶ Return to the Preference list



### Setting Up Your Favorite Channel List

**FAV** View your Favorite Channels by pressing the Favorite Button

▶ Highlight Favorite Channels

▶ Display Channels list

▶ Highlight a channel

SELECT OK Add or remove from the Current Favorites list



 
## Settings Menu: Parental Control

### Establish a PIN Number

▶ Highlight Parental Control

▶ Display Initial PIN Setup


Follow the onscreen prompt to establish your PIN

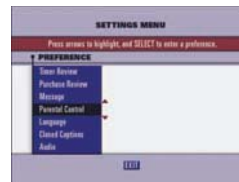

### Require a PIN to Purchase Shows

▶ Highlight Purchasing

▶ Display the Setting list

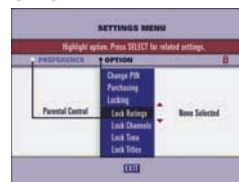

This option is independent of Parental Control Locking options

### Require a PIN to Purchase Shows (cont.)

▶ Highlight PIN Required

SELECT OK Select PIN Required

▶ Return to Option list



### Activate Parental Control Settings

▶ Highlight Locking

▶ Display the Setting list

▶ Highlight On

SELECT OK Select On



### Require a PIN to View Shows By Rating

▶ Highlight Lock Ratings

▶ Display the Rating list

▶ Highlight a Rating

SELECT OK Lock the rating and all higher ratings



### Require a PIN to View Shows By Channel

▶ Highlight Lock Channels

▶ Display the Channels list

▶ Highlight a channel

SELECT OK Lock or unlock a channel



### Require a PIN to View Shows By Time

▶ Highlight Lock Time


▶ Display the Start list

▶ Highlight a start time

SELECT OK Select a start time; display End list

▶ Highlight an end time

SELECT OK Select an end time

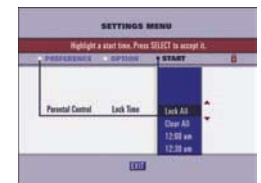

Use the Lock Titles option to: Hide NC-17 and NR(Adult) rated titles and Require a PIN to view like rated shows